



## Sky+ Remote Control Programming

### Programming your Sky+ remote control to operate your TV.

The Sky+ remote control will operate your Sky+ by default, however in most cases your Sky+ remote control can be programmed to operate some or all of the following functions on your TV.

- Switching the TV to and from Stand-by.
- Changing TV channels via the number buttons.
- Volume control.
- Mute Control.
- Terrestrial Text services.

To confirm compatibility with your TV, please complete the following procedure.

Please select the manufacturer of your TV from the list below

If your TV model number is listed, make a note of the 3 digit code.

If it is not listed, make a note of all codes listed against the manufacturer of your TV. (You will need to enter each code in turn to try to obtain a compatible code)

### Sky+ Remote Control Unit Programming Procedure

Follow the steps below

1. Select any channel on the TV.
2. Point your Sky+ remote control away from the TV and press the tv button.
3. Press and hold down the Select and red buttons simultaneously on the Sky+ remote control until the red light at the top of the Sky+ remote control flashes twice.
4. Input the 3 digit number from the Sky+ remote control codes then press the Select button. The red light at the top of the Sky+ remote control should flash twice.
5. Point the Sky+ remote control at the TV and try the volume button.
  - If this works try the other TV functions.
  - If these work then the correct code has been selected.
  - It's important to note that not all TV functions will be supported by the Sky+ remote control e.g. Picture in Picture.

If all functions do not work correctly, then repeat steps 1 - 3 and work through all the relevant 3 digit numbers from the Sky+ remote control codes, until you find the code which supports all or as many of the TV functions as possible.

Please note: In order to operate both your TV and Sky+ with your Sky+ remote control, you will be required to switch modes e.g. to switch on your TV from stand-by, you would need to press "TV" followed by the "Stand-by" button. Then to change channel on your Sky+ you would need to press the "Sky" button followed by the "TV guide" button.

Manufacturer	Model	Codes
Accent		065

Accuphase	R35F18	652
Acura		037
Admiral		115 121 241 292 391 446
Adyson		244 245
Agashi		244
AGB		103 544
Agef		115
Aiko		297 292 244 389 100 219 461 063 065 245 399 037
Aim		065 302
Aiwa		037 039 064 185 402 908
Aiwa	RCAVT02, SCAVT02, SE1430, SE2130, SE2130K, TVC1400K, TVSE1430K, TVSE2130K	733
Aiwa	RCZVT03, SE141, SE141K, SE211, SE211K, TVC1400, TVSE141EH, TVSE141K	729
Aiwa	VXT147K	908
Akai		<b>236</b> 544 630 065 659 <b>508</b> 379 335 609 100 103 516 476 246 245 244 <b>191</b> 292 576 219 063 461 584 399 037 389 574
Akai	CT2158	236
Akai	CT2829NUK	191
Akai	AKTV2020	508
Akai	2102/2ST, 28022ST, 28082ST, 33052ST, 7RZ206C3	742
Akai	2111T, NR2111T, TV2111T	743
Akai	DPW4200, RCDP4200	736
Akito		300 065
Akito	CW1420R	065
Akura		246 292 065 440 311 199 310 387 397 521 037 304
Akura	1030, AVTV014	696

Alba		037 065 246 399 263 064 446 609 275 077 515 244 398 239 400 459 191 383 607
Alba	AK19060824229	383
Alba	CTV4889	065
Alba	V48CM	037
Alba	3359, 930, CTV359, CTV3409, CTV3459, CTV3459AK20	696
Alba	T14ECO	705
Alba	CTV5165	742
Alba	CTV3411	471
Allstar		065
Amstrad		205 440 065 399 037 199 461 544 382 050 397 103 390 246 292
Amstrad	CTV3020N CTV3121NS CTV3128N TV7128N	065
Amstrad	3028N	440
Anitech		037 502 104 065 292
Ansonic		351 402 040 065 130 191 398 287 037 312 275
Ansonic	3796TX, 3796VTX, 930	733
Apollo		501
Ardem		514
Ardem	5R4801, 70TL3NT, 7RZ206C2, NR36M15M, NR55M10M, NR34NTSI	742
Aristona		041 065 040 584
ASA		133 132 115 374 098
Asberg		065 104
Asora		037
Atlantic		234 244 065 348 287
Atori		037
Audiosonic	ABS6102/06C1, KT8942TX	743
Audiosonic	KT9056STX, KT9255STX	742

Audioton		292 398 514 245
Autovox		377 245 104 572 364 275 234 115
AYR		563
Baird		<b>137</b> 221 <b>371</b> 218 220 101 <b>236</b> 100 033 245
Baird	RRS191N	137
Baird	RRS5990	236
Baird	D6093	371
Bang & Olufsen		593 115 <b>114</b>
Bang & Olufsen	7423	114
Barco		191 444
Basic Line		037 310 246 065 191 402
Basic Line	BL1415TX, BL3743, BL3743T	696
Beko		<b>514 398 065</b>
Beko	27420 30328MX	514
Beko	29121NX NR28128NX	065
Beko	11214T	398
Beko	14241, 20212, 20242, 20243, 20244, 21241, 21242, 12.1Chassis, 14212, 14213, 14213TDS, 20212R, 20212RD, 20212T, 21211, 29411VNDJ 23416ND, NR14213R, NR14B3M04XY, NR20212T, TVB4216	743
Beko	21411, 25411, 28411, 28412, 33411, 20411, 21241T, 21411ND, 25411ND, 28411ND, 28412ND, 28416, 28416NDS, 28416VNDS, 28426ND, 284248WNS,28T1081, 32416, 32426VNDS, 33411ND, NR14213R, NR20242T, NR28411ND, NR28411TD, NR28416ND, NR284248WNS, NR28B4T05N, NR32416NDS, NR32426NDS, NRT09NTSIAV, NRTS28T, RZ206/C4, TVB4831, TVB5130, TVB5230, TVB5635	742
Beon		060 065 446
Berthen	CTV14	696
Best		449 398 365
Bestar		402 065 398
Binatone		245

Black Diamond		065 556
Black Diamond	BDS2846WS	065
Black Diamond	BDS28WS	556
Blaupunkt		346 355 219 241 476 329 582 563 228 356 223
Blue Sky	930, BS3366, BS36, BS3798, BS3799TX	696
Blue Sky	B9045BK55S, GP2110, NRG21S	743
Blue Sky	BK705, BK70S, NRBK55S, NRBK70S, NRF70, NRF84, NRSX2810, NRTBK70S, SX2810, TK7000, TV28BSFX70	742
Blue Sky	CB3698	652
Bondstec		275
Boots		245 300
BPL		310 065
Brionvega		115
Britannia		244 245
Brinkman	3789TEXT	696
Brother		292
BSR		322 191
BTC		246
Bush		246 263 377 037 064 065 310 300 383 399 391 402 547 292 239 312 609 322 339 515 236 389 035 191 232 245 <b>288 714</b>
Bush	2031T 2850 2867 2163 2874 2571 2857 2863NTX WS6671 WS7671 WS6672 2034T 2871NTX 2030T WS7671 2868NTX 2059NTX 2571NTX 2874NTX WS6678	065
Bush	2054T	288
Bush	2876NPX	246
Bush	11AK20, 1433, 1434, 1434AK20, 1438, 1454, 1473T, 1474T, 1478T, 930, CTV3418, R03	696
Bush	1477T	705
Bush	1496MTV, MailTV	645
Bush	14971, InternetTV, ITV2101, ITV2112,	642

	ITV2800, ITV6600, ITV8401, ITV8401, ITV8402, KWR2020, NRITV2112, NRITV6600, WR2020	
Bush	2890D, 6690D, 7690D, IDTV, WS6690D	688
Bush	6VM187, RF6682VPL, RF7682VPL, WS6680, 2878NTX 2138T	742
Bush	DVD140TV	726
Bush	DVD660TV, DVD760TV, WS6672, WS5673	584
Bush	2878NTXS1L, WS7680, 2878NTX	714
Carena		065 483
Cascade		065 037
Cathay		065
Cello	HTW28	065
Centurion		065
Century		241 115 275
Cimline		241 115 275
City		037
Clarivox		446 098
Clatronic		348 245 399 246 275 065 037 130 292 104 398 607
Clatronic	CTV502STNT, CTV502STVT	742
CMS Hightec		245
Conic		060
Contec		244 037 039 064 185
Continental		137, 224, 226, 427, 361, 515, 596
Crezar		241
Crosley		191 112 102 104 115 275 280 241
Crown		037 514 <b>065</b> 387 607 446 398 104 515 449 397 236
Crown	GRP21NT	065
Crown	CTF2805	515
Crown	CTV7501, CTV7511, CTV9315	743
Crown	CTV7711, CTV8130, CTV8230, CTV8330, CTV8380CTV8535, CTV8735, CTV8954S,	742

CTV9230		
Crystal		459
CS Electronics		244 275 246
CTC		275
Cyberton		246
Daewoo		037 065 402 244 527 245 246
Daewoo	T202 QA12P, T2023QA12B DMQ2997 GB21AST GB20T8ST GB2898ST DTE/28A7GB DMQ2593 GB2898ST	065
Daewoo	GB14H1N	244
Daewoo	GB14H1N	244
Daewoo	DWX2880GB	662
Daewoo	DWX2888GB	536
Daewoo	14C4T, 28A7,DT20C4T, DTE25G7GB, DTE28, DTE28617, DTE2887GBS, DTE2898GB, DTE289GB, DTE28A74GB, DTE28A75, DTE28A76BS, DTE28A7GB, DTE28A7GB(S), DTE28G75, DTE28G7F, DTE28G7GB, DTE28G7GB, DTE28G8, DTE29G3GB, DTL25G7GB, DTP28A7GBS, DTW28W2GB-100, DVX28W5S, DWF28W, DWF28W8GB, DWP28W2GB, DWX28W, DWX28W5GB, F20C4N, GB14C4N, R40A01, R46G22, S20C4L, S20C4NTL DWX-28, DWF-28, DTF-29, DTP-25 DTP-28, GB14C4NT	662
Daewoo	52F112, AV28B5EES, DSC3210E(GB), DSC3270E(GB), DTA21Y1P, DVN14F6N, DVN14F7N, DVN20F6N, DVN20F7N, DVT20F6LA, GB1458T1, GB147T1, GB14F7T1, GB14F8S, GB14F8T1,GB14F8T2, GB14H2NBL, GB20F7T2, GB20F8T2, GB20T8ST, GB21F1T2, GB21F1T2S, GB21T5ST, GB2898ST, GB28G2ST, GB28G2ST, GB28G2STS, IR2898ST, R35A01, R35F18, R35F22, R35F27,TV/VCRCombo, TVC142T	652
Dainichi		246 244
Dansai		292 065 063 244 060
Dansette		440
Dantax		398 514
Dantax	DLBO	742
Dantax	MND41	743
Datsura		236
Dawa		065
Daytron		402 037 065

Decca		065 100 544 300 277 245 272 077 061 103
Decca	D14TFGS DN8159	065
Decca	D14RKG6LS, D21TKG5S	649
DeGraaf	BT3314020	236 255 072 576 191
DeGraaf	C-D51JS2	236
DER		221 218
Derwent		229
Desmet		065 348
Diamond	DTV3401, DTV7401	726
Digiline		065
Domeos	TV5500DL	696
Domland		422
Doric		229
DTS		037
Dual		547 371 331 287 065 245 427 380 422 377 572 364
Dual-Tec		245 191 287
Dumont		241 098 115 245 100 132 130
Dux		040 065
Dynatron		065
Eddison		137 224 226 427 361 515 596
Elekta		292 310
Elektronska		335
Elin		132 377 065 133 244 389 576 037 476 191
Elite		065 246
Elta		292 037
Emmerson	EVT14F7, EVT20F7, TV/VCRCombo	652
Erres		065 040



Etron		311 065 191 037
Fenner		402 037
Ferguson		<b>101 363</b> 221 218 653 137 <b>266</b> 371 220 <b>702</b> 033 315 035 <b>588 236</b>
Ferguson	B59F DS1NO M55200 T51N DSF68NX TS1A2 TX3790 C51F T59N TS9F TX685L2 T10	363
Ferguson	T59N 59D3	702
Ferguson	B39N	266
Ferguson	W7023U	588
Ferguson	CE24WN4-B	236
Ferguson	405TX91, A51F, 51P7	101
Ferguson	M5517U1, M5517U1, M8421U	653
Fidelity		244 221 460 544 391 379 411 <b>065</b> 400 191 399 616 <b>292</b> 502
Fidelity	CTV3228NF CTV3014F CTV3221NF	065
Fidelity	CTV920	292
Filsai		245
Finlandia		<b>374 387</b> 236 391 576 389
Finlandia	2242	387
Finlandia	40172726	374
Finlux		132 <b>133</b> 065 <b>374</b> 245 100 544 098 115 207 130 104 103 659
Finlux	50F21 302B	133
Finlux	50285	374
Finlux	Color55FOST, FL51BK502, FL55BKS, FL71FOST, FLB4BK50	742
Finlux	CTW2827T	584
Finlux	FL51BK50	743
Finlux	FX702	657

Finlux	CB142, CB212	652
Firstline	1030, 930, FL14TXT, FL3798TX, FL3897, FLAV3799TX, FTX14, FX3798TX, M3798TXT	696
Firstline	FX6301, RFL70ES	742
Firstline	R35F20	652
Fisher		132 236 <b>185</b> 245 115 377 100 331 191 398 064 389 064 389 572 073 583 182
Fisher	CFB2110STX	185
FNR		130
Forgestone		221
Forgestone		221
Fortress		121 115
Fraba		398 065
Friac		037 130 065
Friac	7000/3	683
Frontech		502 245 275 377 459 476 292 037 391
Fujitsu		100 207 130 234 191 245
Fujitsu	P42RM01B, P42RT101B, PDS42TR, Plasma Vision, PSP4201	671
Fujitsu	P42RM07H, PDS4214, PDS4234WS, PDS4242W, Plasma, PSP4201	711
Funai		292 322 207
Funai	14A111	696
Galaxi		130 065
Galaxis		398 130 065 446
GBC		241 037 191 402 246
GE		315 588 363 137 310
GEC		549 191 233 245 377 071 103 065
Geloso		275 402 241 037 191 391

		nbsp;
General Technic		037
General		137 499 315
Genexxa		246 065 191 440 521
Goldfunk	3703T	696
Goldline		365
Goldstar		<b>065</b> 405 318 246 275 037 060 391 137 459 389 398 191 <b>244</b> 502
Goldstar	CIT9322	244
Goldstar	CI21C22F	065
Goldstar	CL14F85B	743
Goodmans		<b>065</b> 064 100 588 285 037 292 544 207 318 <b>363</b> 399 <b>402</b> 515 <b>527</b> 392 371 245 <b>563</b> 297 584 060 103 263 508 063 616 055
Goodmans	00294382 285NS	527
Goodmans	148T 2145TS 2195TX21B1TW58S 285NS 336NIS GTV66W1 GTV69W4 W288NF TR0C17UPSU 205N GTV288 148T57 W280NF GTV211 215N 20C1 20T3TUSU 2045TX 2028T- 201BT 2050R GTV14DVDX1 GTV76W3 GTV76W4	065
Goodmans	28BKJ	055
Goodmans	GD2880A GB2880B GB2580	363
Goodmans	289NS VT1456PSA	402
Goodmans	ST70-700A.NIC	563
Goodmans	1476TS, 2065TS, 206NS, 2145TS, 216NS, 217NS, 218NS, 255NS(B), 257NS, 285NS(B), 289NS, R40A01, TW28D11, 295NS	662
Goodmans	930, GTV34R4, GTV34R6BLU4, GTV34T5AK20, GTV34T6	696
Goodmans	DTE28A6PSV, GB1458T1, R35F18, R35F30, TV/VCRCombo, TVC141, TVC142T, TVC145T, TVC146TWS, TVC201T,	652
GPM		246
Granada		379 387 <b>391</b> 544 229

		072 065 236 174 245 073 367 064 530 588 501 367 384 236 040 254 103 136 104 100 363 536
Granada	C41HF4/D L5103312	236
Granada	C51/E25	391
Grandin	36MM001ARG, 930, GR1499	696
Grandin	51BPS89, 51BPS99	743
Grandin	70SBI003ARG, 8UMB1003ARG	733
Grundig		563 582 515 098 584 219 104 233 223 065 471
Grundig	FT70-700 822DOOFA MW82- 500IRDT ST63725 ST63755 TF55-302 GT210S. MW822699 CVC2030ST ST70-875	563
Grundig	T70-1021, T70-1022	065
Grundig	MW82701 ST55/730 MW70/2700	582
Grundig	GT1401	515
Grundig	T55-1120 T55-1020 WF703020	471
Grundig	32WF100 W82-2030	584
Haier	BT0018AJ, HT2119, HYF28D	726
Halifax		244 292 245
Hampton		245 244
Hanimex		322
Hanseatic	CTV2083VT, CTV2195AVT, R40A01	662
Hanseatic	CTV701692S, CTV406950, CTV821692S	733
Hantarex		037 130 065 355 241
Hantor		065
Harwood		285 037 065 060 440 345
Hikona		502 246
HiLine		292 065
Hinari		037 064 065 207 246 263 515 383 392 311 191 471 236 239

Hisawa	Model Unknown	742
Hit		115
Hitachi		<b>253 384 377 173 606</b> <b>469 591 509</b> 065 071 072 064 060 133 137 224 245 255 191 391 576 544 501 222 100 371 226 178 304 103 549 497 527 584 334 604 123 536
Hitachi	22114TE 3DS C2156TN C2514T C28WD2TN CT2846TN C32W35TN CT172 28W511TN C24W410 C24W1TN CLE902A 105W U9G022131 C2146TN CT848TN CT4W1TN/C24W410SN C2886 C32W511 C2574TN	253
Hitachi	C2118T 2156TN C2556TN CT2576TN C2856TN C28W5211TN CVT2128 C2848TN CT2146TN C28W510 C28W410 C32WD2TN C28W510TN C24W1TN 32PD3000 C28W411TN C2119R 42PMA400E C2976TN	509
Hitachi	C213TN C2133TN C2558TN	384
Hitachi	2879DB	536
Hitachi	C2156TN C28W410 C28W410SN811	606
Hitachi	C2524T	591
Hitachi	CCE/876E	469
Hitachi	CPT2488 C2519TG C2514TE311 CPT2188	377
Hitachi	CT117TCT BS415 X877013 C2114TE C2509T	173
Hitachi	C2976TN	065
Hitachi	21F45, 28W410, 28W510, 28W511, 29F45, 32W510, 32W511, C28W411TN	509
Hitachi	28W40, 28WF523, 32W35, 32W40, 32WF523, 32WF720, 32WF727, 32WF810, 43WP910, 55WP910, C2121T, C28W35TN, C28W40TN, C28WF523N, C32W35TN, C32W40TN, CL28W30TANCLE932A, CLE933A, CLE941, FX770E, FX880E, FX980E, 42PD5200 RM775E, VT880E, VTMX935E, VTRM800EV, W30 ;	747
Hitachi	C2125T, C2142, C2142N, C2842, C2842N, C28W440, C28W440N, C28WF540, C32WF540, CL21255, CP2125T, CP2142, RC200, C2143S PD5000	772
Hitachi	CL2854AN, R40A01	662
Hoher	H28T90	742

Huanyu		065 402 244
Hyper		037 244 245 275
Hypson	NRR3099NBL, NRR55	743
Hypson	NRR70N	742
Hypson	V3600	696
Iberia		065
ICE		245 244 246 399 065 292 037
Ideal	IDTV28N	065
Indesit		241 339
Indiana		065
Ingelen		515
Ingelen	Gmunden, HB55Fugen, HB7718HB, HB71TXT	742
Ingersol		037
Inno Hit		065 037 275 104 246 100 544 245 335 318 103
Internal		065
Internal	INT1472, INT2070, R35F28	652
ITC		245
ITS		292 310 244 399 065 246
ITT		576 191 574 379 207 549 389 221 374 508 367 377 501 035 236
ITT-Nokia		585 508 191 374 379 501 576 549 389 367 207 377 236 574 659 634
Jean		064
JEC		063
JEG	CT7951GB	065
JMB		<b>065 584</b>
JMB	N028WSS 3028WSS G020T L701DX	065
JMB	V028WSS	584

JMB	20T	662
JVC		<b>681 081</b> 122 399 221 218 634 220 064 033 246 <b>536</b>
JVC	25TSIEK AU25F18K AV21F1EK AV21H1EK AV21TF4EK AV25VM1EK AV28WFT1EK AV28WFR1EK AV215X1EK AV24WT2EK AV29FX2EK AV28WT4EK AV32WX1EK AV28F1EK AV25T5TEK AV28WR4EKS AV28WT5EKS AV28FEK AV28WT2EK AV28R100EKS 28WFT/1EKS AV28WRZEK C21TX1SP AV25FIEK, AV29WS3, AV25SX1EK, AV21SX1EK, AV290X1EK AV25R370KE AV32T67, AV28T25EK, AV28T25EKS , AV32T25EKS	681
JVC	CM36224-019-E	536
JVC	AV32WX1EK AV29SX2EK	081
JVC	GDV4210PZW, GDV4211, RMC575	759
JVC	GVD425, LCD Projector, Projector, RMC556, RMC559,	671
Kamp		244
KB Aristocrat		191
Kennedy		234 241 191 463
Kingsley		244
Kolster		065
Konka		399 246
Konka	TVC70SX2810	742
Kontakt		515
Kosmos		065
Kotron		440 292
Kyoshu		060 440 292
Kyoto		191 060
Lecson	TVCR914B, TVCR914S	652
Lecson	CTV-900W	065
LG (Lucky Goldstar)		<b>065</b> 244 405 318 037 398 191 459 245 389 060 275

LG (Lucky Goldstar)	CD29Q10ET	065
LG	NRC1/20F080F C114E20 CF21A50F WF32A14T RZ20LA70	065
LG	28CB10RX, CB14F84, CB20F84X, NRCB14F84TX, R128CZ10RX R132CZ10RX 28CZ10RX	742
LG	CB14F80X, CI14F80	743
LG	CB21TUOX	726
LG	R128CZ10RX, CE29Q10ET	508
LG	RE28FZ10PX	584
Lifetec	1530, LT3733V7, LT3733VT, LT3734, LT3734VT, LT3739VT	696
Lifetec	7301	683
Lifetec	Unknown TV	671
Lloyd's		037
Lloytron		060
Lodos	X28	065
Loewe		540 115 065 398 103
Loewe	Planus4672ZP	683
Logik		221 033 061 039
Logik	LK74	726
Logix	LTV3601, RC223	696
Lumatron		287 234 101 391 245 390 292 389 065 191
Luxor		191 374 318 222 576 377 384 389 508 236 391
Lyetec	LT7055VTST	065
M Tec		300 060
Madison		065
Magnum	7065VTstereo, TV065VTstereo	742
Magnum	TV5545VT	743
Manhattan	MT3753	696
Marantz		065



Mark		244 245 402 065 037
Mark	TBT2002TXT	743
Mark	TBT2830NT	742
Masuda		246
Matsui		<b>263</b> 205 037 383 <b>065</b> <b>471</b> 039 100 <b>065 515</b> 239 245 382 322 461 300 607 544 399 063 297 498 391 459 103 <b>219</b> 061 363 285 584 064 <b>236</b> 073 483 191 616 377 <b>223</b> 055 <b>908</b>
Matsui	20Z1T 522889 28WVDP WV2DP 1408R 28WN 28WV2N	219
Matsui	2107T 280W01 2107NS 28WN04 28WN05	471
Matsui	219T 2160 2899N 28MI	263
Matsui	32WN03 14VIC 28ND3 21N1 14R1 2528N03 28N03 25N10 32WN20TV	065
Matsui	25M1MK2	236
Matsui	21N1, R120G1000	515
Matsui	20VIR 21V1N	223
Matsui	20T10	742
Maxim	11-51C2P2PT90PAL1	065
Matsui	TVR162S	908
McMichael		071
Medion		065
Medion	3731VT, 930, MD3729, MD3731, ND3729	696
Medion	MD3702	726
Melectronic	MTS2100DW135, R40A01	662
Memorex		037 178 182 278
Mercury		037 065
Metz	Florida37TC31, FloridaVT31TC31, RC10, RC19	696
Micromaxx		065
Micromaxx	MM3742	696

Minato		065
Minato		065
Minerva		582 104 335 223 515 563 219 098
Minoka		387 397 440 065
Mitsubishi		<b>136</b> 382 064 221 065 <b>540</b> 115 563 035 178 061 229 <b>121</b> <b>136</b>
Mitsubishi	CT2146TX CT21M2TX CT21M3TX CT23A3STX CT25AV1B CT25A3STXP CT21ASSTX CT25M2TX CT25S7B CT28AV1B CT28C7B CT21STX CT2525TX CT25M3TX C25B7B CT25A4STX CT29A4STX CT21AV1B	136
Mitsubishi	CT2617TX	121
Mitsubishi	CT21M5BT	150
Mitsubishi	25A1LS BD32WS BD28S	540
Mitsubishi	XP4015C	719
Monaco		037
Motion		104
MTC		088 377 244 540 398
Multi Broadcast		221
Multimat		460
Multitech		244 130 275 377 037 103 065 514 391 398 245
Multitec	CTV1400	696
Murphy		132 244 191 502 100
NAD		194 389
Nagoa		311
Naiko		065
Nakimura		065 402
Naonis		391
National		254 242 368
NEC	20T773TI	483 037 402 348 245 065 064 198

NEC	MT1050, Plasmasync4210W, Plasmasysnc42MPZ, PX42VM2G, RD327, RD337	732
NEI		<b>065 365 459 399</b>
NEI	2031TX 2131TX	459
NEI	EI4D1X	065
NEI	EI4D1X	065
Nesco		207 275
Network		365 060
Neufunk		584 037 065
Neufunk	TV167001	742
New Tech		245 371 065 584 037
Nicamagic		244
Nikkai		060 064 037 245 063 065 100 244 246 292 365
Nikko		345
Nobliko		130 244 098 104
Nokia		<b>508</b> 501 576 379 236 402 387 389 585 367 574 035 377 <b>374</b> 191 634 659
Nokia	FB72B2 SP71K1	508
Nokia	SFN5515	374
Nordmende		137 224 371 315 226 223 339 241 427 588
Nordmende	NRF2108T, NTV20/100T, NVTV1452	742
Novatronic		065 133
NU-TEC	NTT321A	726
Omega		292
Onwa		246 399 461 609
Onwa	K9228	461
Orbit		065
Orion		322 383 263 205 039 065 053 348 349 392 544 054 130

		037 502 239 584 297 345 471 505 207
Orion	16:9TV(AB=7000), 284DLTV2810, 284FC, 287CE, 7000, ATSEuroplus, CTW7300, GV750, Otto8295PIP, Triade28, Triade34, Triade4300, TV2807, TV2810, TV2840, TV8250	683
Orion	NR5177TXSI, NR5177XSI, NRTV797, TV5177SI	742
Orline		065 246
Ormond	OR1498L	696
Osaki		616 100 300 292 402 502 245 521 297 246 304 285 060 065 440
Osaki	CI5013T	065
Osio		065
Oso		246
Osume		502 060 246 064 100 185
Otake		345
Pacific		<b>065 584</b>
Pacific	PTV7001T	065
Pacific	PTV7001T76630, PTV5102	584
Pacific	PTV3605, PTV5103	733
Pacific	PTV7004T, PTV7005T	733
Pacific	PTV5103T	743
Packard Bell	Plasma Screen	065
Pael		244
Palladium	284DE, 32DPB, 765/390, 765/392, 772/542, 8000	683
Palsonic		292 065 312 440
Palsonic	5160G, 6150G, 6820PF, 811Q, RCR110A	733
Panama		275 245 244 292 065 037
Panasonic		<b>678 254 278</b> 154 242 368 191 302 128 544 241 <b>065</b> 395

		379 389 103 576 <b>136 650</b>
Panasonic	TX2151 TX2151T TXW28R4 TC2153R TXBW28D20P TX25MD3 TX21M1T-BK TX28DK1	278
Panasonic	TX215521	136
Panasonic	TX21512 TX2153T TX29AD2DP TX32PK2 TX32PK20 TX28PK3 TC21L3PX TX25X1DL TX25MD1B TX28X1 TX32PK1 TX2132V TXW28R4DP TX33A1G TX25MD1/M TX2151TBH TX21ND4 TX21CK1 32DTZ TX21V2BC TX21MD41 TX47PT1 TX25MK1 TXW32R 4DA TX28PL10 TX28LD16B TX29A3 TX25W2 TX32PL10 TX36D3DT TX25MD3 TX32TF1 TX28PS12 32PD30 TH42PA20B TX32PB50 TX32T5S TX29AD1DP TX32PS1 TX28DTX1	678
Panasonic	TX2482 TX21612 TX2471 TX25T2K TX21T1	254
Panasonic	TUDSB20	065
Panasonic	TX32PLI	650
Pausa		037
Perdio		065 191 297 100 348
Phase		060
Philco		065 280 446 275 241 191 115 112 104 398 102 173
Philharmonic		245
Philips		<b>584 065</b> 040 041 582 221 115 071 351 402 034 219 451 371 035
Philips	14PT3685/05 21GR2550/058 21PT532A-05 21PT161B-05 21PT166A/03 MD12E 29PT828C/05 32PW9615/05 28PW6322/05 32BW6332/25 28WVRN 32PW952505 SL6-1 25ST1761 25PT727B/05 21GR2554/05B 28PW6606 21PT161A105 32PW9566/05R TW6328 28MD12E 28PT/4523/25 32PW9525C 28PT4521 24PW6006/05 32TW6517 32PW8515/05 32PF99445/12 42PF9945/12 21PT5505 23PF99445/12	584

Philips	20PV164/05 20PV230/07 24PW632405R 25PT4475/05 25PT4523/05 28PW6516/05 28PW5324/05 28PW6315 28PW6515 29PT9113-05 29PT828C/25 32PW6322/25 32PW631S 32PW6517 32VW6005 32PW962B 32PW6006/25 32PW6526/05	065
Phoenix		244 514 100 065 297 115 616 348 498 191 398
Phonola		221 584 041 065 244 115 040
Pioneer		137 194 451 191 065 398 371 389 398 514
Pioneer	CUSD025, CU-SD025, SD25AV1, SD28AV1	636
Pioneer	PDP434HDE	194
Plantron		037 065 292
Playsonic		245
Playsonic		245
Playsonic	Model Unknown, NR33B4TL5NX	742
Poppy		037
Portland	P14F5, R35F30	652
Precision		245
Prima		037 060 502 292
Prinz		572 100 377 222
Profex		459 191 037
Profi-Tronic		065 130
Proline	97908, 288N1, 925983, NV332100 28MIT, CTV28NIT	065 653 349 040 100
Proline	20R1, 28MIT, CTV28NIT	065
Proline	NV3200 ZON1	349
Proline	1485R,1485T , 20N1, PT09DW1248, R40A01, R46G22, W28D1	662
Prosonic		242 244 402 065 398 399 607
Prosonic	930, CTV3710DT	696
Prosonic	unknown	742
Protech	7296NT	065 245 037 275 377 292 365 446 459 130

Protech	FA7040	065
Protech	3731, 3731T, 930	696
Provision	FA7040	065 527
Pye		<b>584 065</b> 040 041 115
Pye	M1432-05	584
Pye	M2052/05X KS3457/OST	065
Pymi		037
Quasar		275 502 278
Questa		064 060
Quelle	FK8186	696
RadioShack		060 065 182
Radiotone		398 037 065 446 292 607
Radiotone	P37508, P37508TEXT	696
Rank		098
RCA		588 121 653
Recor		065
Rediffusion		379 229 064 576 389
Redstar		065
Reflex		065
Reoc	754, ABS7SZ206, TT7	742
Rerlex	CTV3760, RC930	696
Revox		398 065
Rex		191 234 287 275 391
Rex		191 234 287 275 391
Roadstar		037 292 246 446
Robotron		115
Rowa	344, 514, 516, RTM344, RTM514, RTM516	726
Roxy		476
RTF		115
Saba		115 191 137 544 371

		224 363 315 241 103 427 389 226 233 576 653
Saikou		285
Saisho		039 205 263 544 037 239 292 382 459 245 061 103 191
Salora		<b>391</b> 576 191 222 377 384 387 367 389 103 318 574 392 544
Salora	21K77	391
Salora	14MF51, RK100	649
Sambers		104 241 103 130 544
Samsung		<b>065 584</b> 615 037 245 476 516 292 318 236 398 244 100 118 <b>060 088</b>
Samsung	C15332T WF28W6VNG CE21DN4 14MT34BU C12052OBT C16844N C15052AT CI5322X CI5013T CI3373T	065
Samsung	CW68CNG 505018P CW21443N CW28C33N CZ21A083N	088
Samsung	503IT	584
Samsung	CI/5013T	060
Samsung	CI68CN, C15937AN	615
Samsung	00104A, 00104D, 00104J, 00116B, 00220A, 28C75V6, 29A5, 29A6, 29A7, 32W6VN, 6888W, CB20R1XXSA, CB21F5, CB21FS, CB21KDX, CB21KDXSA, CB688TAB, C121S20BT, C15344NC, C1683CN, C221403N, CS2908WT, CS29A6NT, CS29D6S, CW21A8VN, CW21C33NS, CW21C3W, CW21D83NS, CW25C339, CW25D83NS, CW28C73N, CW28C75V, CW28C7DG, CW28C7NG, CW28C7VDG, CW28C7VNG, CW28C7VW, CW28C7VWG, CW28C7W, CW28C7WG, CW28C95V, CW28D83NS, CW29A8VHE, CW533CDG, CW533CNG, CW533CVDG, CW533CVNG, CW533CVW, CW533CVWG, CW533CW, CW533CWG, CW5344, CW5344DG, CW5344NG, CW5344VDG, CW5344VNG, CW5344VW, CW5344VWG, CW5344W, CW5344WG, CW593CDG, CW593CNG, CW593CVDG, CW593CVNG, CW593CVW, CW593CVWG, CW593CW, CW593CWG, CW5944DG, CW5944NG, CW5944VDG, CW5944VNG, CW5944VW, CW5944VWG, CW5944W, CW5944WG, CW6244W, CW683CDG, CW683CHG, CW68CNG, CW683CVDG, CW683CVNG, CW683CVW, CW683CVWG, CW683CW, CW683CWG, CW6840DG, CW6840NG, CW6840VDG, CW6840VNG, CW6840VW, CW6840VWG, CW6840W, CW6840WG,	646



	CW6844DG, CW6844NG, CW6844VDG, CW6844VNG, CW6844VW, CW6844VWG, CW6844W, CW6844WG, CW703CDG, CW703CNG, CW703CVDG, CW703CVNG, CW703CVW, CW703CVWG, CW703CW, CW703CWG, CW883NG, CWS1C33N, CZ21A8VN, CZ6844N, LW22A13WD, PS42P3S, RMTV131B, SP42B5HF, SP42W4HP, TM57, TM59, TM59AA6450236, TV4881, W524W6VN, WF28V53N, WF28W6VNG, WF28W8VN, WS24W63N, WS24W63NS, WS24W64N, WS24W6DG, WS24W6NG, WS24W6VDG, WS24W6VNG, WS24W6VW, WS24W6VWG, WS24W6W, WS24W6WG, WS28M64N, WS28V53N, WS28V53NS, WS28W5VNS, WS28W63N, WS28W63NS8, WS28W6DG, WS28W6NG, WS28W6VDG, WS28W6VN, WS28W6VNG, WS28W6VW, WS28W6VWG, WS28W6W, WS28W6WG, WS32V54NS, WS32W64VDG, WS32W66V, WS32W6DG, WS32W6NG, WS32W6VDG, WS32W6VNG, WS32W6VW, WS32W6VWG, WS32W6W, WS32W6WG, WS32W7NS, WZ32W6VDG	
Samsung	3F1400050010, CS722AWT, CS7277PF, CS765D, CS823AMF, CW4468N, SP42W5HFX, SPM4388, SPM5288, TV6272, TV6330, TV686WP, TV7272	672
Samsung	CB20R1	642
Sandra		244 245
Sanela		266
Sansui		065
Sansui	RSS161, SV1402, SV2002, SV2102	683
Sanyo		<b>236</b> 073 100 064 174 185 367 039 245 246 572 583 037 132 182 244 191 398 241 <b>263</b>
Sanyo	14MTZ 28DN1 C21E535B C21EF55B C25DN4 CE28WN4 CE28WN7 CE28WN6B C25EG98B C25EG77NB 026F0988 C1614292 C28EH82F CBP2152 CE28WN3B CE21DNS-B CE21DN7/B CPB2180A C21E57NB C28EH25NB C28ER57NB 21MTI CBP2152 CB6649 C25EG958 CE24WN5B CE28WN3 CE28WN4-B CE32WN5B CE32WP3-B CE25DN4 CE21MT3-B 73SEN 28DN2 CE21DN3B CE21DN4/B CE21DN3 21DN2 29WN3 C25EG95B C28WN1B CE21DN7/B CE28WN6B CE28WN7	236
Sanyo	25BN1	367
Sanyo	CE28WN3-B CE28WN4-B	263
Save		065
Schaub Lorenz	2102/2ST, 2810/100, 28BCTL2, SL21022ST, SL2810/100ST, SL3310	742
Schneider		065 040 351 245 246

		275 399 041 287 389 422 584 572 377 380 364 331 371 547 191
Schneider	STV200-2T, CT7951GB, STV2003-2, STV2802/T, Cinema3201	065
Schneider	Cinema281001, Cinema2819, Cinema3203, NRSTV2804T, STV2804, STV2804T	742
Schneider	RC223, RC233, STV360, STV365,	696
Schneider	STV21201	742
Schneider	STV21201	743
Seaway	R40A01, SWTV70	652
SEG		065
SEG	CT7000800GB, CT7951GB, CT3212	<b>065</b>
SEG	1030, 3798, 930, CT1900, CT1901, CT2900, CT7800, MADRID, PREMIUM, ROM	696
SEG	DVT14F6FSD, R46F02	662
Seleco		191 234 287 390 391
Sencora		037
Sentra	9X9000	037 311 063 246 304
Sharp	66CS0TH	<b>121</b> 064 <b>065</b> 081 322 122 185
Sharp	59CSDAH	065
Sharp	66FWF/54H CV-2133H(BK) 28JF73H 28LW92H 32LW92H DB5903H 51DT25H DV5161H DV5932H 66ES/03H DV51328 DV5107H 76SWS3H S6FWS3H DV5105H DV594TH DV5940H 59DS03H CV3730H, 28HW/50CH LC13E1E	121
Siarem		241 191 130 335 115 103
Siemens		563 582 355 356 185 065 241 174 060 219 223 329 228
Siemens		563 582 355 356 185 065 241 174 060 219 223 329 228
Sierra		065 584 040
Siesta		398
Siesta		398

Silver		389 064 207
Silver	CA2158	207
Silver	UTV9014XL	743
Sinudyne		389 263 038 544 191 234 065 377 115 241 130 322 205 103 572
Skantic		384
Sky	PDS4250 (Plasma)	662
Sky	UFKON824N48W300	065
SLX	930, SLX3745TSL	696
Sogera		348
Solavox		389 060 100 191 576
Sontec		322 065 398
Sony		<b>533 038 039 064 102 130 505</b>
Sony	24WIT KV28SX60U	038
Sony	FX60 KV/28DS60U K VX21720 KV24/WX1U K VX2582U KV29F1U KV28FS20U FX642170 KV32DF20 KV32D560U K VX2572U KV2552U KV2952U KV32WS2 KV29X1U KVM2151U KV-A2542U K VX2972U KV14T1U 32FX68U KV28CL10U, KV28LF35U, KV28CL10U, KV28FX68U, KV2171U, KV2171U KV28SK68U, KV321S36U	533
Sony	KP41DS1U, KP41S34, KPS4112U, KV21LS30U, KV28DS20, KV28DX30U, KV28FX20U, KV28FX60B, KV28FX60U, KV2951D, KV2961D, KV29E1D, KV29FX60U, KV29X2B, KV29X2D, KV32DS204, KV32DS209U, KV32FX60, KV32FX60B, KV32FX60U, KV3431, KV36FS70, KVA2131B, KVA2531B, KVA2931B, KVE2941D, KVS2941D, KVS2953B, KVS2953E, RM831, RM887, RM888, RM891, RM892, RMTV222D, RMU303, RMU305, SLVF900UX, SLVF900VX, STRDE335	679
Sony	KD28DL1SU, KV28FX66U	505
Soundwave	00195 2098R	446 065 348
Ssangyong		037 060

Standard		037 245 246 402 065 348
Starlite		065 037 191
Stenway		310 246
Strato		065 037 292
Sunstar		037 065 399
Sunwood		065 037
Superla		103 544 244
Supertech		584 065 244 037
Supra		402 037
Susumu		502 297 363
Sutron		037
Sydney		245 244
Sytong		244
Tactus		300
Tandberg		389 137 365 395 390 224
Tandy		246 100 245 191 304 275 121
Tashiko		071 174 244 060 387 245 285 616 198 064 191
Tatung	TYN9B01P T21TD61	<b>065</b> 100 544 300 277 245 272 077 039 103
Tatung	T20TD51 TUNOA51 T2896430 T21NT92 T289430 T20TF70	065
Tatung	T20TD51 TUNOA51 T2896430	065
Tatung	TUV9731	100
Tatung	UNKNOWN1, RK100, T14RK70, T20TK70, T21TK70	649
Tatung	UNKNOWN2, UNKNOWN3	584
Tatung	RC300	084
TCM	10502	742
Teac		199 292 540 065 483 037 440
Teac	930, EU34T, RC772, UE34T	696

Teac	CTDV512, CTM342H, CTM4122H, CTM4828H, CTM5122H, CTM5150H, M5122H, RC747, RC309	726
Teac	EU2880, EU3280, EU68F	742
Teac	MV1421, MV1422, MV4822, RC757, RC35	652
TEC		499 037 245 275 502 304 363 365
Tech Line		065
Tech Line	FFS36	696
Technics		278 678
TechniSat	7000, Kinosat, Kinosat16:9, Kinostar, Technistar4:3	683
Technosonic		065
Tech Wood		065
Telefunken		137 363 101 371 129 065 315 499 334 427 224 505 033 514 112 280 290 102 653
Telefunken	TTV210, TTV240	726
Telefusion		065
Telemeister		348 065
Telesonic		065
Telestar		065
Teletech		065 037 365 275
Teletech	1030, CT360, CT361	696
Teleton		287 245 234 064 191 377
Televideon		244 191 348
Tempest		037
Tensai		275 037 132 405 245 322 133 345 348 402 246 399 065
Tensai	TCT1410PX	743
Tenson		037 348
Tevion	TV66SIL	065
Tevion	1530, 3731VT, MD3731VT	696
Texet		245 402 037

Thomson		363 635 137 224 371 065 377 233 427 361 499 315 226 588 <b>653 625</b>
Thomson	ECT10, 24W725US, 28WF401, 28WF45E, 24WK24U, 24WK25UG, WFG...28...UK 28WN22E, 32WF401G, 32WF45U, 32WK65U, 32WR25UG	
Thomson	21DS73H	363
Thomson	28WS22U, 28WS23U, 32WF25UG, 28WF45UG 28WR23UG, 28WX4115, 32WT45US 32UG	653
Thomson	28WS401G, 32WF64EB, 28WS45U	625
Thorn		101 221 220 <b>218 527</b> 065 521 <b>402</b> 540 063 100 132 266 533 563 397 112 387 300 102 363 581 033
Thorn	CT5122T C51T P1480R	402
Thorn	CT514TN	527
Thorn	CT512T CT22T	218
Thorn-Ferguson		371
Tokyo		244 063 476
Toshiba	28W93B 2563DB	<b>536 063</b> 271 098 117 232 530 <b>581</b> 130 473 088 182 064 <b>216 253 508</b>
Toshiba	156T9B 175T9B 213T4B 2151TB 2197DB 2512DB 2535DB 2539DB 2550TB 2563DB 256T9B 28Z27B2 2812DB 2857DB 2835DB 2873DB 2877DB 28W93B 2500TB 3357DB 573DB 2879DB T1510T8 25001TB7 32DB 32M8DB 2855DB CT9689 2939DB 40PW03B MV40PWA 32M9DB3 2893DB 32317B 2573DB 337BB 2552D 36/21P 28207B 2173DB 285T8B 2173DB 28W8DBA 28N03B 2505 238DB 439J936 3377DB 2181TB 82Z27B 28W23B 32ZP18P 42PW33P 32NW2DB 28ZH37B 32W8DB 32ZP38B 32NW7DB 32WIS 28N33B VTV1400 2987DB	536
Toshiba	2101TB 213T4B 2573DB 32ZP38	581
Toshiba	3377DB	216
Toshiba	2987DB	253
Toshiba	2987DB 3339DB 2877DB 322D09B 2173D6 14N21B2 14N21B2	063

Toshiba	14T01B, 21T01B, CT815, CT81500082B, CT824, CT832	746
Toshiba	TVD213B	726
Toshiba	CT90040	508
Towada		377 130 245
Trans Continens		245 065 335
Trans Continens	MM3742, TR3610/2, TR36102	696
Transonic	CTV813, GT813B	726
Trident		103 544 245
Tristar		246 221
Triumph		584 232 205 271 065 374 544 103
Uher		065 398 234 402 348 287 514 104 331 446
Ultra		220
Unic Line		065 501
United		065
United	APS610206C3, NRUTV2020X, UTV1028XNS, UTV2020X	742
United	UTV8014X, UTV9020L	743
Universum	930, FK8185, FK8186, FK8190	696
Univox		065 115 365 065 191
Vestel		065 245 191
Vestel	3743T, 930, RC930	696
Vexa		065 037
Video System		065
Videoton		459 384 191
Vidikron		130
Viper		365
Visiola		244
Vision		065 348
Visorex		460
Vistar		389 304 234

Vortec		065
Voxson		446 115 065 104 391
Waltham		304 315 384 065 446 245
Waltham	CT3759	696
Watson		<b>065 348</b>
Watson	FA7040 FA7039 FA2801TS	065
Watson	FA3201PS	348
Watson	930, FA3619, FA3629	696
Watt Radio		241 191 130 377 244 572
Wega		115 065 241 064
Wegavox		037
Weltblick		348 065
Wharfedale		065
Wharfedale	550 890 350STB 32P 550S	<b>065</b>
Wharfedale	890	584
Wharfedale	RC514	699
White Westinghouse		348 365 065 244
White Westinghouse	TV/VCRCombo, WVT11311, WVT11911	652
Windstar		310
Wintel	NR32WT10F	742
Xrypton		065
Yokan		065
Yoko		398 292 065 244 459 037 245 246 449 367
York Sound		065
Yorx		246
Zanussi		391 245 234
Zenith	R35A09, TV/VCRCombo, TVA1321	652
Zenor		367



